

**S-TYPE**

DATE 05/00

S204-04

**SERVICE****TECHNICAL BULLETIN****Front Wheel Bearing/Wheel Speed Sensor –  
Replacement – Installation Precautions**MODEL 2000 MY-ON  
S-TYPE

VIN L00001-ON

**Issue:**

Replacement front wheel bearings are supplied complete with a new wheel speed sensor already installed and sealed into the bearing housing. Do not separate the wheel sensor from the assembly when installing. The seal is important in preventing the entry of water that can lead to premature failure of the bearing.

**Action:**

When installing a wheel bearing/wheel speed sensor assembly, use great care not to disturb the sealed joint of the wheel speed sensor to the bearing housing during installation of the bearing.

If there is any doubt about the integrity of the sealing, or if the sensor was disturbed while installing the bearing, follow the revised sealing procedure detailed in Technical Bulletin S206-02.

**Warranty Information:**

This Technical Bulletin is issued for information only.