

**Front Seats – Removal –  
Handling Precautions**MODEL 2000 MY-ON  
S-TYPE

VIN L00001-ON

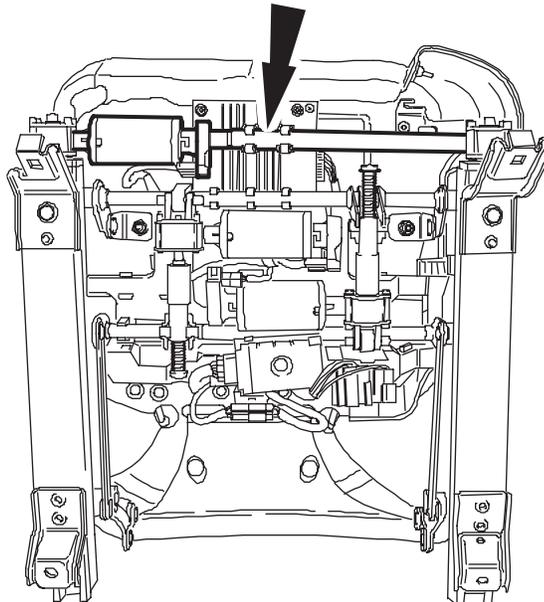
**Issue:**

This technical bulletin provides guidance on handling precautions to use when working on the front seats of S-TYPE vehicles.

**Action:**

Especially on vehicles equipped with 'memory' seats, use care not to damage the flexible drive shaft and potentiometer of the seat fore/aft adjustment mechanism if it becomes necessary to remove a seat from the vehicle.

The flexible drive and potentiometer are located on the underside of the cushion pan, towards the front (Illustration 1). While there is adequate clearance to handle the seat at the lower front edge of the cushion pan, it is important to use care.

**LOCATION OF FLEXIBLE DRIVE AND POTENTIOMETER**

MJSI-3579

**Warranty Information:**

This technical bulletin is issued for information only.